



PRODUCT
DATASHEET '25-26'

ADVANCE ANALYTIK

REVOLUTIONIZING ONLINE MONITORING SOLUTIONS



OPTICS-1000 CHLORIDE (Cl-)

www.advanceanalytik.com
sales@advanceanalytik.com

Optics-1000 Series

CHLORIDE (Cl⁻)

Method - ISE

The standard known addition (SKA) technique is used to perform the analysis. During the process, two readings are done. The difference between both and the slope found during calibration are used to calculate the concentration. Possible changes on the matrix sample are corrected due to this both lectures, as the reference to calculate the result is the relative difference of mV and not the absolute values. This avoids external interferences.



Principle of measurement

Reagent 1 is added to activate the electrode before the analysis. After that, a first measurement is done. Subsequently, a small volume of a high concentrated nitrate solution is added. Finally, a second lecture of mV takes place to calculate the result.

Advantages of the method

The method is very simple and is fairly specific as the chloride measurement and just a few parameters cause interferences, which can be removed.



Optics-1000 CHLORIDE (Cl-)

Technical Specifications

Basic Specifications	
Range	From 0 to 5ppm / 20ppm / 50ppm / 100ppm / 500ppm / 1000ppm / 5000ppm (Adjustable higher concentrations)
Accuracy	±2%
Repeatability	±2%
Resolution	0,01 ppm / 0,1 ppm / 1 ppm
Analysis time	around 10 minutes
Calibration	one point
ISE	Chloride Cl- electrode
Reagents consumption	
Reagent 1	0.5 ml / analysis - 0.5L / month
Reagent 2	0.5 ml / analysis - 0.5L / month (Monthly consumption calculated assuming 1 analysis per hour.)



APPLICATIONS

- Pharma industry
- Refineries and more.



Aquaculture Farms
Maintain Hd levels in fish tanks for optimal aquatic conditions.



Drinking Water Quality
Ensure safe drinking water by monitoring Hd levels in water sources.



Environmental Research
Assess Hd concentrations in water bodies to study pollution and ecosystem health.




Agriculture and Irrigation
Monitor Hd levels in irrigation water to optimize nutrient supply to crops.



Scientific Laboratories
Conduct Hd analysis for research and educational purposes.



Industrial Processes
Control Hd concentrations in wastewater to meet environmental regulations.

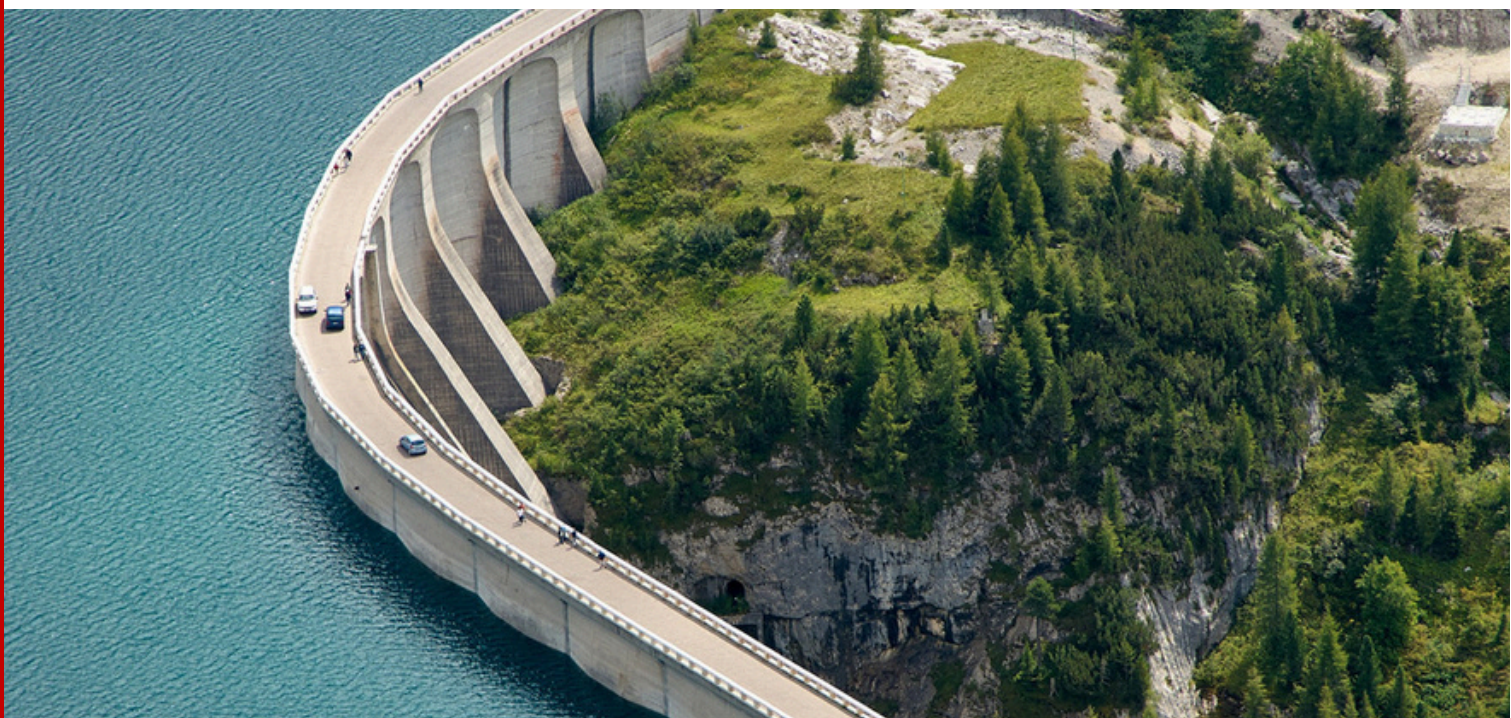

Note -

This data sheet serves as general information about the OPTICS-1000 CHLORIDE (Cl-). For specific technical details, installation guidelines, and troubleshooting assistance, please refer to the official user manual provided with the product.

For inquiries and detailed technical information, please contact sales@advanceanalytik.com.



LET'S CONNECT !

Let's work together to find a solution that works for you



Contact Us :

+36 70328 6862

1132, Budapest Váci ut 16 Faz 12. ajto

<https://advanceanalytik.com>

sales@advanceanalytik.com

