



PRODUCT
DATASHEET '24

ADVANCE ANALYTIK

REVOLUTIONIZING ONLINE MONITORING SOLUTIONS



Optics-1000 Phenol ($\text{C}_6\text{H}_6\text{O}$)

www.advanceanalytik.com
sales@advanceanalytik.com

Optics-1000 Phenol (C₆H₆O)

Method Colorimetric

After adding the sample into the measurement cell, some reagents are added in order to adjust the solution to the desired conditions (pH, valence's elements, etc.). Then, a blank is done to correct any temperature or turbidity disturbance. Subsequently, a last reagent is added, and it reacts with solution developing a color, which is measured using a correct wavelength. Thanks to the photometer used, the result achieves a great accuracy.



Principle of measurement

The method relies upon the reaction of the phenol with 4-aminoantipyrine followed by oxidation of the adduct with persulfate to form a pink complex.

Advantages of the method

The method is specific for phenol and all non-4-substituted monohydric phenols. The method is also very sensitive and levels as low as 0 to 100 ppb may be measured using the correct circumstances.



Optics-1000 Phenol


Technical Specifications

Basic Specifications	
Range	From 0 to 100 ppb / 500 ppb / 1000 ppb. (Adjustable higher concentrations with internal dilution.)
Accuracy	±2%
Repeatability	±2%
Resolution	0,1 ppb
Analysis time	around 15 minutes
Calibration	two point
LED Wavelength	510 nm
Reagents consumption	
Reagent 1	4 ml / analysis - 3.0L / month
Reagent 2	4 ml / analysis - 3.0L / month (Monthly consumption calculated assuming 1 analysis per hour.)



APPLICATIONS

- Refinery and more.

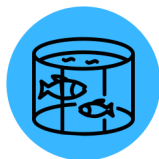

Aquaculture Farms
Maintain Hd levels in fish tanks for optimal aquatic conditions.



Drinking Water Quality
Ensure safe drinking water by monitoring Hd levels in water sources.



Environmental Research
Assess Hd concentrations in water bodies to study pollution and ecosystem health.




Agriculture and Irrigation
Monitor Hd levels in irrigation water to optimize nutrient supply to crops.



Scientific Laboratories
Conduct Hd analysis for research and educational purposes.



Industrial Processes
Control Hd concentrations in wastewater to meet environmental regulations.

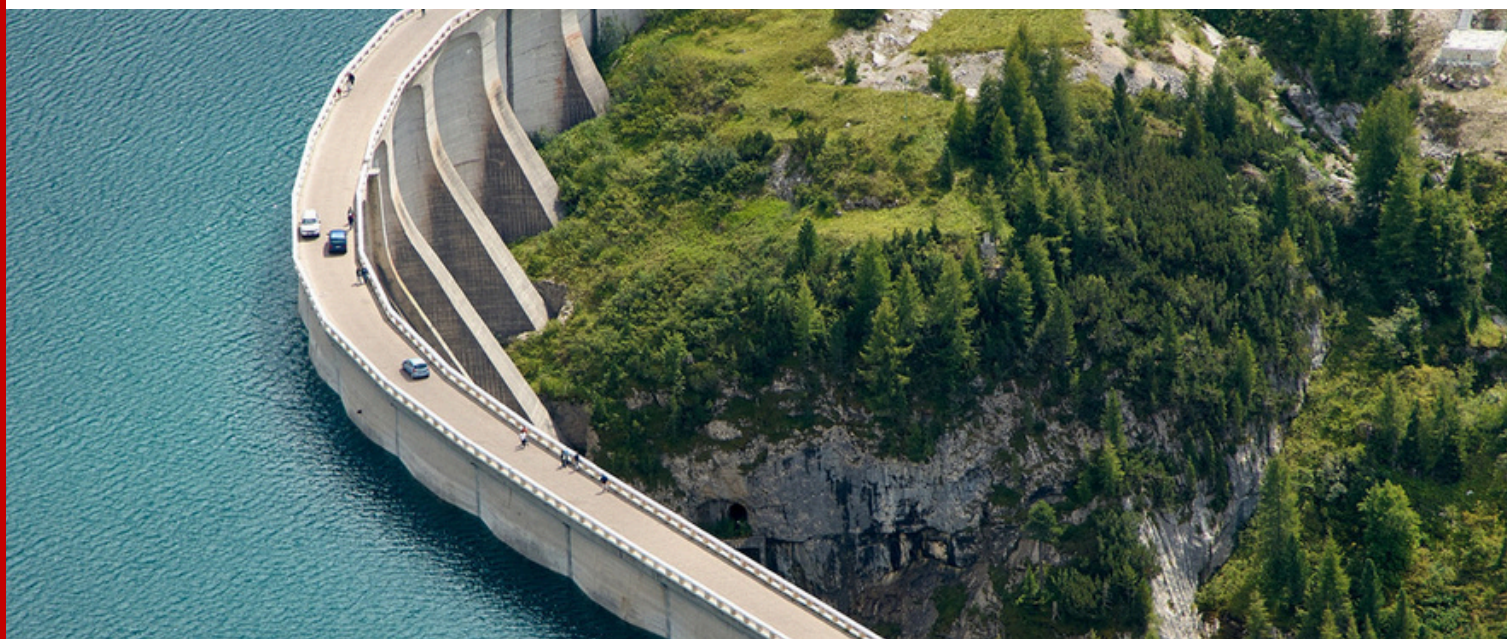

Note -

This data sheet serves as general information about the Optics-1000 Phenol. For specific technical details, installation guidelines, and troubleshooting assistance, please refer to the official user manual provided with the product.

For inquiries and detailed technical information, please contact sales@advanceanalytik.com.



LET'S CONNECT !

Let's work together to find a solution that works for you



Contact Us :

+36 70328 6862

1132, Budapest Váci ut 16 Faz 12. ajto

<https://advanceanalytik.com>

sales@advanceanalytik.com

