



VizSens-OD0

Optical Dissolved Oxygen Sensor



www.advanceanalytik.com

**ADVANCE
ANALYTIK**

VizSens-ODO

Optical Dissolved Oxygen Sensor

The VizSens-ODO Optical Dissolved Oxygen Sensor utilizes fluorescence technology to accurately measure dissolved oxygen concentration. A luminescent material on the sensor's cap is excited by blue LED light, emitting red light. The intensity and time of the red light are indicative of oxygen molecule concentration, enabling precise calculations.



Product Features

- New oxygen-sensitive membrane design.
- NTC temperature compensation function.
- Measurement without oxygen consumption, flow rate, or stirring.
- Utilizes breakthrough fluorescence technology.
- Low maintenance requirements with built-in self-diagnosis.
- Plug-and-play installation for easy setup.
- Factory calibration with optional field calibration.
- High anti-jamming digital sensor with standard signal output.
- Integration and networking capabilities.



VizSens-ODO

Technical Specifications


Physical Specifications	
Model	AAPDO-700
Dimensions	Compact design
Cable Material	PUR
Measurement Specifications - Conductivity	
Measurement Range	DO: 0-20 mg/L or 0-200% saturation
	Temperature: 0-45 °C
Accuracy	±2%F.S.
Resolution	0.01 mg/L
Repeatability	±0.3 mg/L
Pressure Range	≤0.3 Mpa
Calibration	
Air automated calibration	
Sample calibration	
Main Material	
Body	SS316L (fresh water)
	Titanium alloy (Ocean marine)
Cover	PPS+ glass fiber
Cable	PUR
Electrical Specifications	
Power Supply	AC: 85-500 VAC (50/60HZ)
	DC: 9~36 VDC
Output	3-way 4-20 mA
Relay	Three-way relays with programmable response parameters.
Communication and Environmental Specifications	
Communication Protocol	MODBUS RS485
Storage Temperature	-15-60 °C
Measuring Temperature	0-45 °C (Non-freezing)




APPLICATIONS



DO monitoring in regulating reservoirs, biochemical pools, and sewage treatment plant effluents.

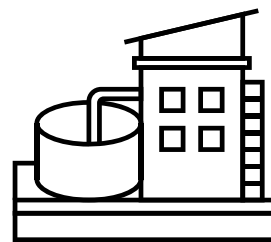

DO monitoring in water treatment plants, surface water, industrial processes, and aquaculture.

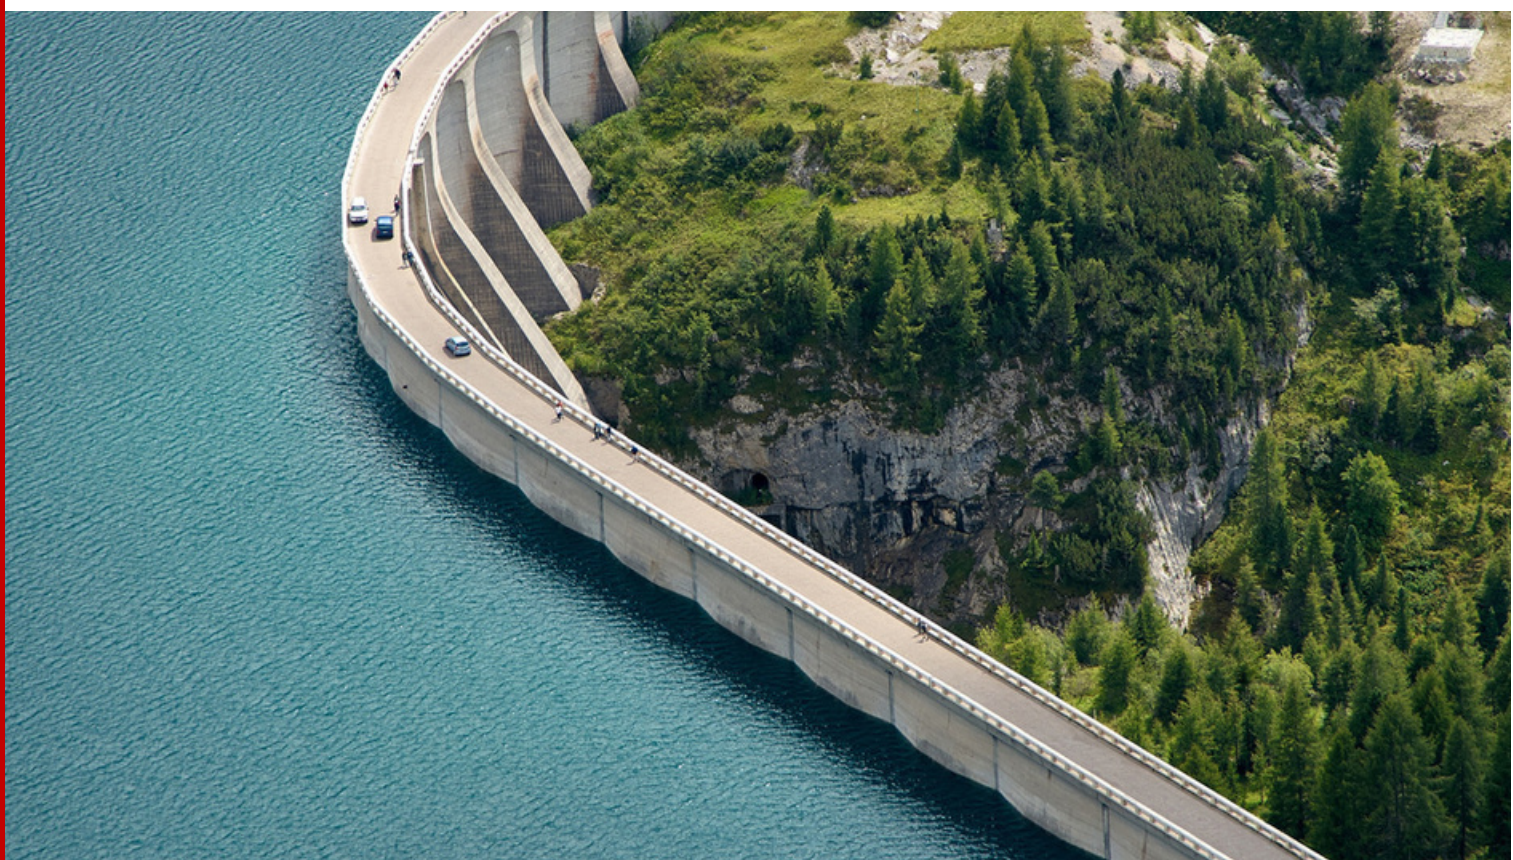

Note -

This data sheet serves as general information about the VizSens-ODO. For specific technical details, installation guidelines, and troubleshooting assistance, please refer to the official user manual provided with the product.

For inquiries and detailed technical information, please contact info@advanceanalytik.com.

ADVANCE ANALYTIK



Advance Analytik KFT
1132, Budapest Váci ut 16
Faz 12. ajtó
+36 70 328 6862
sales@advanceanalytik.com



www.advanceanalytik.com